


MITEL SX200 DIGITAL Superconsole 1000 LCD CONSOLE

FLOW CHART FOR BASIC ATTENDANT FUNCTIONS

Biax COMMUNICATIONS
75 Dillon Ave.
Campbell, CA, 95008
408 866-2429

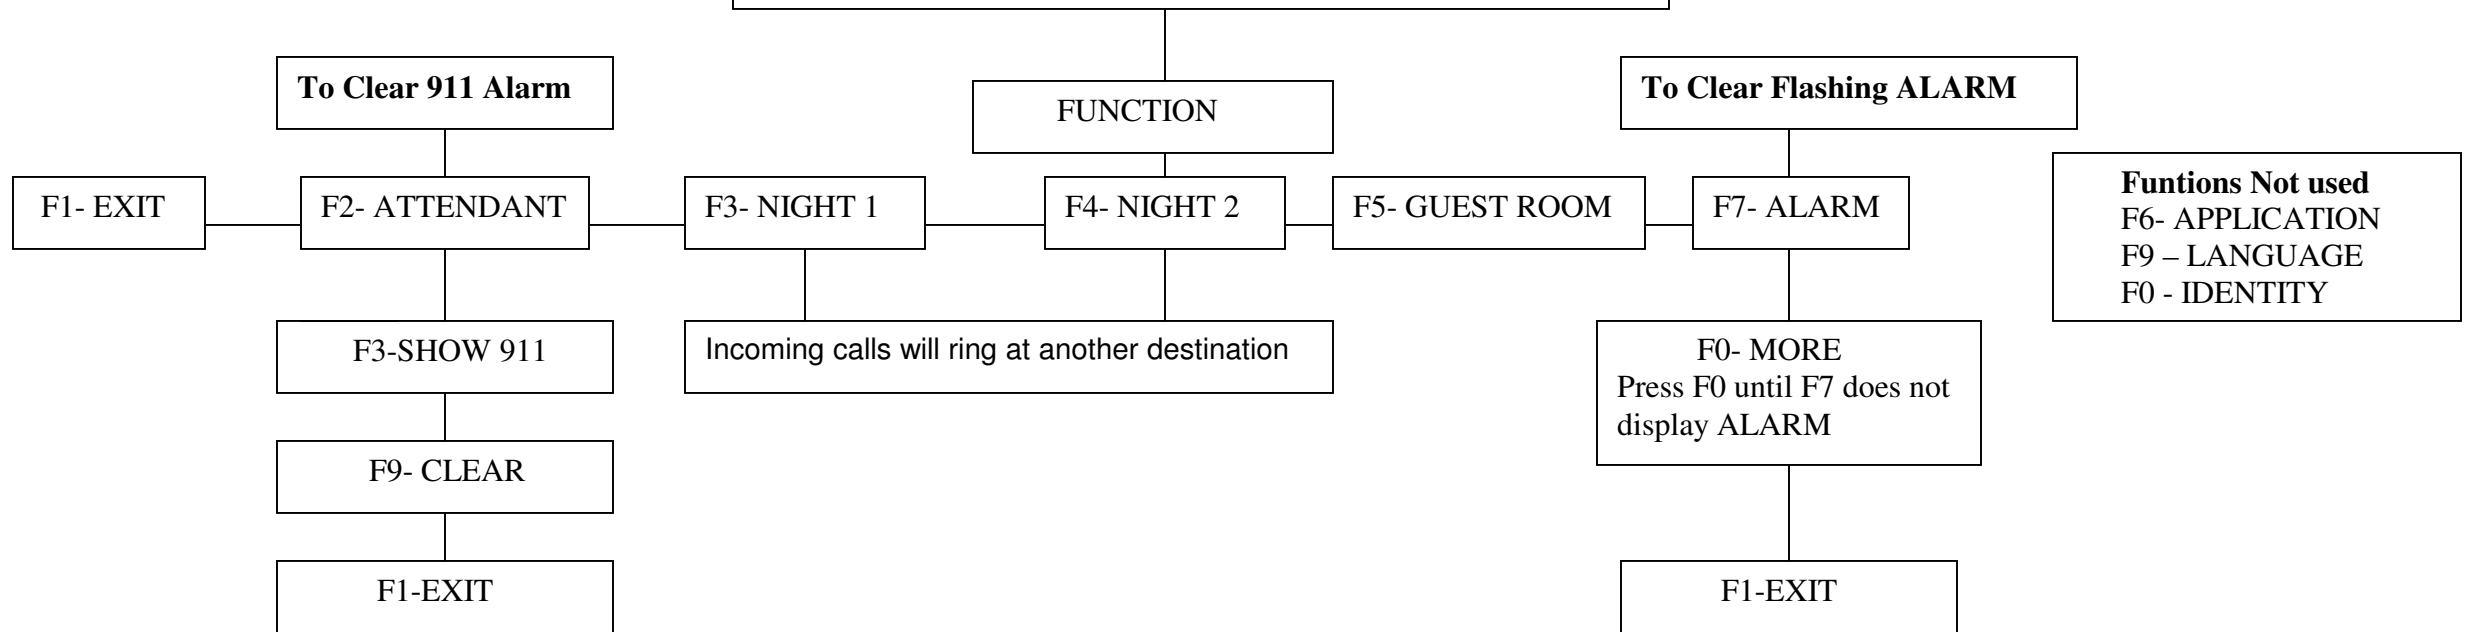

A word regarding alarms:

Flashing alarm "ALARM" displayed on the right side of the console is normally caused by:

- 1) A guest did not answer the wake-up call. They may have checked out before receiving the wake-up call
- 2) A guest left the phone off-hook so that they are not disturbed. This causes a " Lock out " Alam
- 3) A guest has dialed 911 (911 can be dialed even if the room extension is restricted from calling out)

These alarms do not indicate a hardware failure and they can be cleared easily using the steps described above.

MITEL SX200 DIGITAL Superconsole 1000 LCD CONSOLE

FLOW CHART FOR BASIC LODGING FUNCTIONS

