

**Table 3-1 Attendant and Maintenance Functions
(continued)**

Function	Code
Music OFF	*18
Access Trunk by Equipment Number	*19 + Trunk Equipment Number
Trunk Emergency Release	*20 + Trunk Equipment Number
Night Answer Point	*21 + Trunk Equipment Number + new Night Answer Point Stn. No.
Message Reg/Restrictive Station Control	*22 + Extension Number
Call Block – ON	*23
Call Block – OFF	*24
Change COS	*25
Restore COS	*26
Trunk Meter	*27
Cancel All Message Waiting Indications	*29
Alarm Clear/Cancel Alarm Indications	*31
Cancel All Alarms, Alarm Indicators and Busy-Outs	*32
Busy Out Trunk	*41 + Trunk Equipment Number
Busy Out DTMF Generator	*42
Busy Out DTMF Receiver	*43 + DTMF Receiver Number
Busy Out Dial Tone Detector	*44 + Dial Tone Detector Number
Change Verified Authorization Code	*45
Unbusy Trunk	*51 + Trunk Equipment Number
Unbusy DTMF Generator	*52
Unbusy DTMF Receiver	*53 + DTMF Receiver Number
Unbusy Dial Tone Detector	*54 + Dial Tone Detector Number
View Abbreviated Dialing Numbers	*60 + index number
Program Abbreviated Dialing Numbers	*65 + index number
Program Automatic Wake-Up at an extension	*71 + Extension Number
View Automatic Wake-Up at an extension	*72 + Extension Number
Message Register Audit	*73
Printer – Suspend	*75 + *
Printer – Purge and Suspend	*75 + 0
Printer – Resume	*75 + #
Set System Date	*80 + DD-MM-YY
Room Status	*81
Room Status Printout	*82
Do Not Disturb	*85
Restrict DID	*87
Alarm Print – Automatic	*90 + 1
Alarm Print – Disable	*90 + 0
Alarm Print – Print Alarm Queue	*90 + #
English Messaging	*91
French Messaging	*92
Data Dump	*97 + System Security Code
Data Load	*98 + System Security Code
System Status Display	#980
Inter-DX Link Display	#981
Station Status Display	#982
<i>SUPERSET</i> Status Display	#983
Trunk Status Display	#984
Install Default Database	#998
Software Identity Display	#999